


Update and Feedback function

Update:

- 1.Download the update software from OBD2 SCANZ website and unzip it.
- 2.Connect the device with computer via USB cable.



- 3.The update software is only supported by Windows 7/8/10
Click"driver"to install the driver,if computer system is Windows 7.

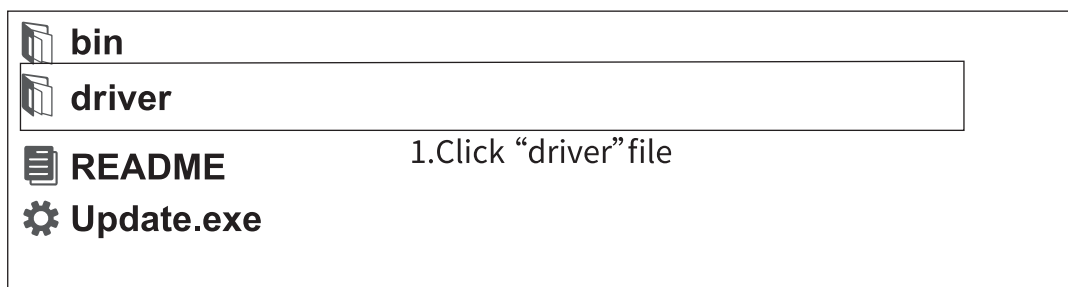

 **bin** **driver** **install driver.bat**

2.Click “install driver.bat” to install the driver

 **bin** **driver** **README** **Update.exe**

3.Click “Update”

Windows 8/10 can run update software directly.

 **bin** **driver** **README** **Update.exe**

Windows8/10 can run update directly

How to generate and send feedback:

If you have any problems with this product ,please use the feedback function.

1) For example:if the [OBDII] function shows connected error with vehicle,please enter [Tool Setup] choose [Feedback] and it displays as follows:

Tool Setup	Feedback
Language	Automatic recording is ready, perform the related functions that require feedback. After the execution, disconnect the car, connect to the computer via USB use the
Beeper	
Instructions (Display at startup)	
Unit of Measure	
Skin Style	
Feedback	
Device Information	↑ ↓ ← → OK ESC
6/7	


Next : Press EXIT Button and return to the main menu. Choose [OBDII] menu to detecting again and it will record the data.

2) Transfer data to your computer and generate feedback file.


Download upgrade file on the computer from OBD2 SCANZ website. The device is connected with computer through USB cable.





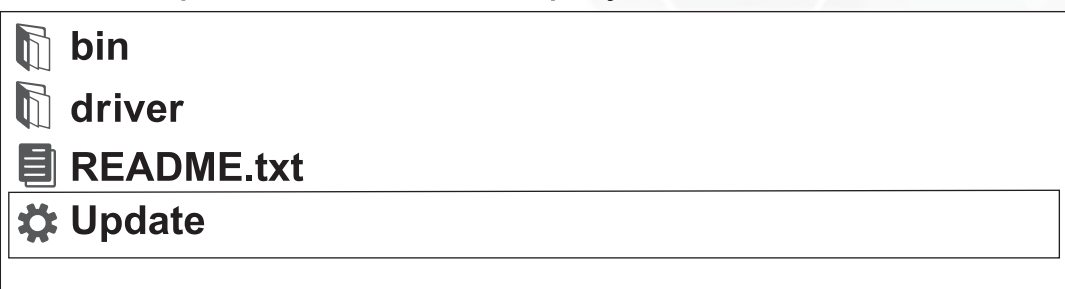


Choose “Update” file and it displays as follow:

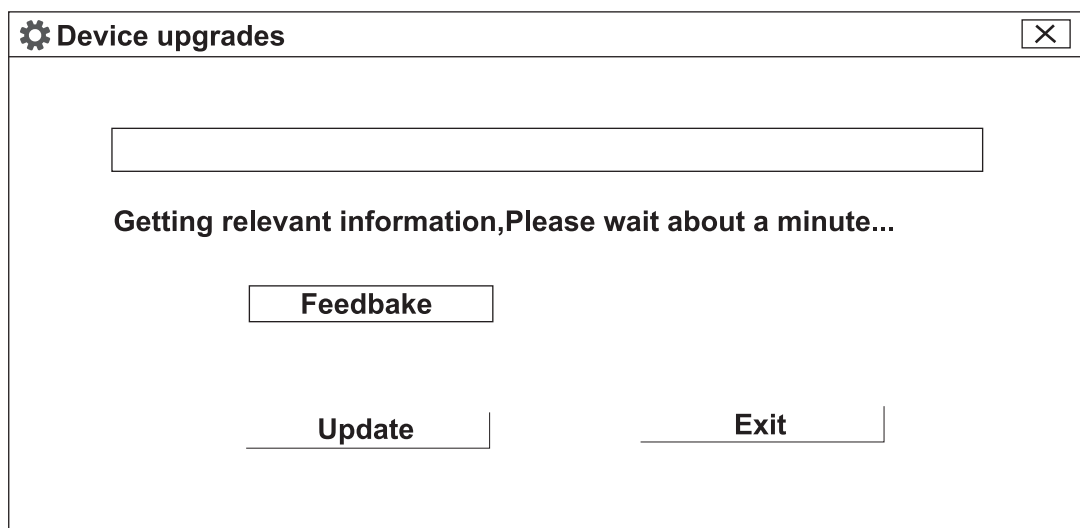

Click “Feedback” and it displays as follow:



-  **bin**
-  **driver**
-  **Feedback.bin**
-  **README.txt**
-  **Update.exe**

Please send the feedback bin file to hey@obd2scanz.com